



INSTRUCTION SHEET

Congratulations on your choice of the Hunter Dan® Thunderbolt® Bolt Action Rifle Set!

This Rifle Set is NOT A TOY and should only be used under CLOSE ADULT SUPERVISION.

---Recommended for Ages 14 and UP---

READ ALL of the instructions before shooting your Thunderbolt for the first time!

Parts List:


- | | |
|---|---|
| 1 – Bolt Action Rifle | 1 – Removable Sight System (Scope) |
| 1 – Removable Clip, Holds 3 Cartridges | 3 – Big Game Silhouette Targets (Deer, Turkey, Bear) |
| 3 – Black Plastic “Feet” for Silhouette Targets | 2 – “AA” Batteries, Already Installed in Gunstock End |
| 6 – Yellow Plastic Cartridges | 30 – Green Rubber Bullets |
| 1 – Miniature Thunderbolt Gun sized for a Hunter Dan® Action Figure | |

An ADULT should assist a minor with the following and at all times while using the Thunderbolt!

1. Have an ADULT carefully remove the plastic zip ties that hold the Thunderbolt in the cardboard box.
2. Within the clear plastic box that contained this Instruction Sheet you will also find the Yellow Cartridges, Green Bullets, 3 Big Game Silhouettes and the Clip.

Assembling the Big Game Silhouette Targets:

1. Find the three black plastic stands.
2. Place them on a flat surface with the ridges facing up.
3. Place the bottom edge of each of the Big Game Animal Silhouettes in to one of the three black plastic stands so that each Big Game Silhouette stands upright with a stand.

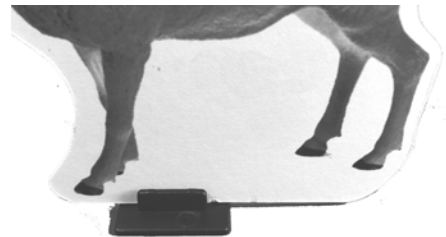

“Re-Loading” Yellow Cartridges and Clip:

1. To “reload” a Yellow Cartridge with a Green Rubber Bullet, just push the Green Rubber Bullet into the narrow end of the Yellow Cartridge. It should look like the image to the right when you have properly reloaded the Yellow Cartridge. Be sure to push it all the way down for best performance of your Thunderbolt.
2. Once you have reloaded several of the cartridges, you can now place up to three of them, one at a time, into the Clip as shown in the image to the right.
3. While pointing your Thunderbolt in a safe direction, you can now insert the loaded Clip into the opening found on the bottom of the Thunderbolt. You should hear a “click” when the clip is fully inserted into the Thunderbolt. Proper alignment of the clip is required to slide the clip fully into the Thunderbolt.




Shooting your Thunderbolt:

1. If your Clip is correctly inserted, you are now ready to cock your Thunderbolt.
2. Now, with a very quick motion, RAISE and PULL BACK the Solid Metal Bolt back until you feel the cocking mechanism set at the very end of the pull. This pulling cocking motion does take some strength and may be challenging for a minor.
3. The pushing cocking motion will remove a loaded Yellow Cartridge from the Clip and place it into the barrel.
4. The SAFETY mechanism will reset itself to SAFE each time the gun is cocked.
5. To fire the Thunderbolt, make sure your target is ready, point the Thunderbolt in a safe direction toward your target, push the safety mechanism to the FIRE position and then pull the TRIGGER.

6. The Thunderbolt shoots the Green Rubber Bullets at approximately 75 feet per second. Although the Bullets can sometimes go up to 50 feet, the best accuracy is found to be around 15 feet or less.
7. To fire your Thunderbolt again, repeat the above steps. Each time you cock your Thunderbolt; the empty Yellow Cartridge should eject away from the gun as you pull the Bolt back and be replaced by a reloaded cartridge found in the clip as you push the bolt forward.

Realistic Sounds!:

1. Your Thunderbolt makes realistic gun sounds when you pull the bolt back and also when you pull the trigger. It is not necessary to Load the gun for the sound features to work.
2. 2-AA Batteries are already installed in the rear stock of the gun image shown below.
3. These batteries should only be handled and replaced by an adult. Recycle and dispose of all batteries properly.

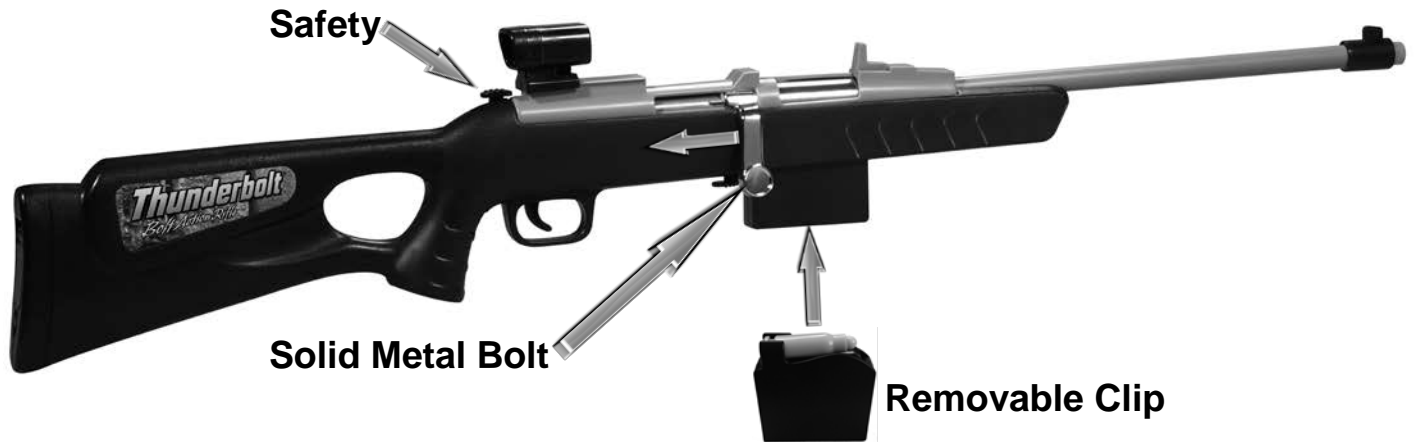

WARNING:

- This Rifle Set is NOT A TOY!
- Adult supervision is recommended for all minors using this Rifle Set
- NOT recommended for children under fourteen (14) years old
- This Rifle Set contains small parts which may be a choking hazard for small children
- DO NOT load this Rifle Set with any objects other than those made specifically for this Rifle Set
- DO NOT shoot this Rifle Set at hard surfaces or the rubber bullets may bounce back at the shooter or others
- NEVER shoot this Rifle at any animals or people or at point blank range
- NEVER aim this RIFLE at anyone's eyes or face
- Eye protection is ALWAYS recommended when shooting this Rifle

You can scan this QR Code to go direct to the Hunter Dan® Thunderbolt® Webpage!



If you have any questions please:

- E-mail us at: sales@hunterdan.com
- Call us at: 888-241-HUNT
- Surf us at: www.hunterdan.com

©Copyright 2011
Creative Outdoor Products, Inc.
No parts of this document may be reproduced
without the expressed written consent of
Creative Outdoor Products, Inc.
All rights reserved.